
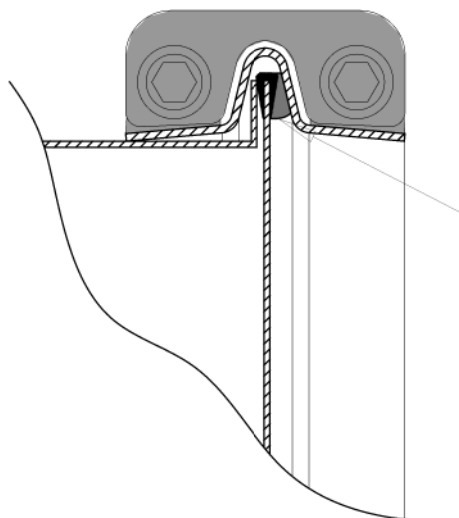


ISTRUZIONI DI MONTAGGIO DEI FONDELLI
Notice de montage du fond des gaines
Caseback assembly instructions

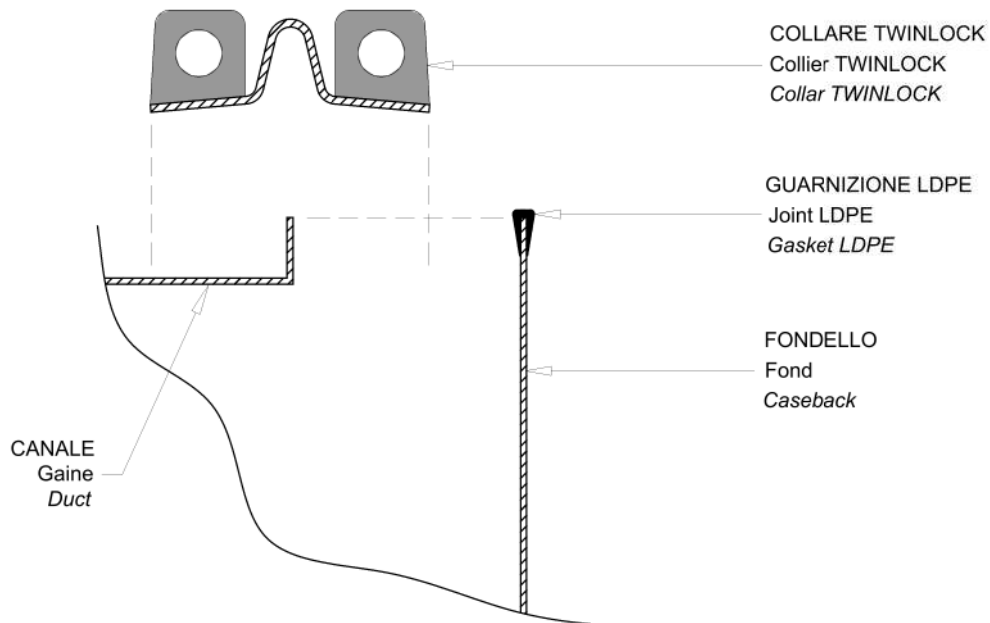

NOTA:
 PER PRESSIONE > 500Pa
 O > Ø 1000 SIGILLARE CON
 MASTICE 2905 R IN
 DOTAZIONE

Note:
 pour une pression > à 500Pa
 ou > Ø 1000 fixer avec du mastic
 2905 R fourni

Remark:
 for a pressure > than 500Pa
 or >1000 Ø seal by using the
 supplied 2905 R mastic